

**DOES
EXACTLY
WHAT IT
SAYS ON
THE TIN™**

Ronseal Promise, if you do exactly what it says on the tin, this product will do exactly what it says on the tin.

Ronseal Eco Clear Wood Preserver is a water based alternative to traditional solvent based preservers which penetrates wood to preserve it against rot and decay. The colourless formulation is designed specially to give wood protection against decay before painting, staining or varnishing, making it ideal for treating window frames, doors, roof timbers or floorboards.

The raw material content of this product derived from crude oil (petrochemicals), has been reduced to less than 11% compared with 99% in standard solvent based wood preservers which has reduced the VOC (Volatile Organic Compound) level from Very High to Low.

Ronseal Eco Shed and Fence Preserver is packaged in a steel tin which contains up to 40% recycled materials and is 100% recyclable.

Ronseal are proud to sponsor the **Woodland Trust** the UK's leading woodland charity. 25p from the sale of this tin will be donated to the Woodland Trust to restore 1m² of native UK woodland. For more information on this go to www.ronseal.co.uk/eco

WHERE CAN I USE IT? **Ronseal Eco Clear Wood Preserver** can be used on interior or exterior wood and joinery such as floorboards, joists, window frames and doors. When using **Ronseal Eco Clear Wood Preserver** on exterior wood it must be overpainted, stained or varnished when dry. Allow 2-3 hours before finishing. **Ronseal Eco Clear Wood Preserver** does not provide waterproofing protection.

Note: Not suitable for wood in ground contact.

HOW MUCH IS NEEDED? Typical use of **Ronseal Eco Clear Wood Preserver** is shown below:

Surface	Number of coats	Application Rate
Joinery, floorboards, roof joints etc.	2 coats by brush or spray. Dip for one hour	4-8m ² per litre
Large timbers not in ground	3 coats by brush or spray	4-8m ² per litre

PREPARATION Ensure all surfaces are clean, dry and free from surface coatings such as paint, varnish, or stain. For rough sawn wood, use a stiff brush to remove dirt, moss, fungal growth and lichens. Weathered wood should be sanded to remove loose wood fibres leaving a sound surface.

For further advice please contact:

Ronseal Technical Services, Tel: 0114 240 9469

Ronseal Ltd., Chapeltown, Sheffield S35 2YP
Tel: 0114 246 7171, Fax: 0114 245 5629
E-mail: enquiry@ronseal.co.uk

www.ronseal.co.uk

The Woodland Trust is a charity registered in England and Wales No.294344 and in Scotland No.SC038885.

Ronseal and Ronseal Does Exactly What it Says on the Tin are registered trademarks of The Sherwin-Williams Company. © 2010

APPLICATION Shake thoroughly before and during use, do not dilute. Do not apply in wet conditions or if rain is likely before product dries. Do not apply in temperatures below 10°C or in high humidity. Do not apply in direct sunlight.

Brush application:

- 1 Shake well before use and pour into a suitable container. Stir well during use.
- 2 Apply even coats finishing in the direction of the grain.
- 3 Apply 2 or 3 coats as directed, allowing 2-3 hours between coats.
- 4 To ensure best protection, apply to all surfaces. Apply to any surfaces cut or abraded after treatment and pay particular attention to all end grain.

Spray application:

Ronseal Sprayers have an accurate spray delivery, however, due to the nature of the product it is recommended that cardboard or plastic sheets are used to protect any areas from overspray. Do not spray in windy conditions. Do not apply in damp conditions or if rain is likely before product dries. Shake the pack thoroughly before use. Pour the liquid into the tank of the Ronseal Sprayer, ensuring the maximum fill level of 5 litres is not exceeded. Stand with the sprayer nozzle 25cm away from the timber and squeeze the trigger to begin spraying. Allow 2-3 hours for the first coat to dry and repeat as required.

CLEAN UP Clean brushes whilst wet with warm water and detergents. Wipe the neck and cap with a clean cloth prior to resealing the pack. Remove as much product as possible from the brush before cleaning.

Remove as much product from the Ronseal Sprayer unit as possible before cleaning. Any unused product should be sprayed back into the container. Clean the Ronseal Sprayer unit immediately after use with clean water, fill the Ronseal Sprayer unit with water and flush through until the spray mist runs clear. DO NOT leave any product in the sprayer unit. Ensure the pump and wand are completely empty before storage.

Do not empty into drains or watercourses. Some local authorities have special facilities for disposing of waste coatings. If using a Ronseal Sprayer please refer to the clean up instructions in the Ronseal Sprayer's User Guide.



5 Litre e

Made in Great Britain

