

Ronseal Kitchen & Bathroom Touch-Up Enamel is the easy and inexpensive way to touch-up flaws, scratches, defects and minor damage on kitchen and bathroom fixtures and appliances.

- Brush applicator for easy use
- Tough, durable and waterproof
- Smooth, long lasting finish

USAGE AREAS

• For use on enamelled cast iron and steel, porcelain, fibreglass, acrylic and other similar material. • Instantaneous repair of bathroom fixtures and appliances e.g. Sinks, Baths, Ceramic Tiles, Washing Machines, Refrigerators, Kitchen Stoves, Fan Motor Housing.

PREPARATION

• It is not recommended to apply this product in damp conditions or if temperature is below 10°C. • Surfaces should be clean, dry and free from dust, dirt and grease. Remove any rust spots or loose material.

APPLICATION


• Shake the Touch-Up Enamel bottle well (Approx 2 minutes). • CAUTION: Hold bottle upright when opening! • Apply the coating in multiple thin coats. • Allow the repair to dry for 24 hours.

CARE AND MAINTENANCE

• Clean surfaces with a detergent solution. • Avoid abrasive cleaners and organic solvents. • Heat resistant to 60°C.



10ml e

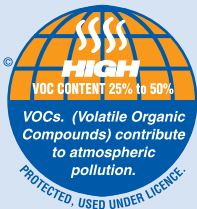

For further advice please contact:

Ronseal Technical Services
Tel: 0114 240 9469

Ronseal Ltd. Chapeltown, Sheffield, S35 2YP.
Tel: 0114 246 7171 Fax: 0114 245 5629
enquiry@ronseal.co.uk
www.ronseal.co.uk

Made in Great Britain. Ronseal & Ronseal Does Exactly What It Says On The Tin are registered trademarks of the Sherwin-Williams Company. © Ronseal 2010

RONSEAL KITCHEN & BATHROOM TOUCH-UP ENAMEL

Contains Xylene. Harmful by inhalation and in contact with skin. Repeated exposure may cause skin dryness or cracking. Keep out of reach of children. Keep away from heat and sources of ignition - NO SMOKING. Wear suitable gloves. If swallowed, seek medical advice immediately and show this container or label. Use only in well ventilated areas.

DOES EXACTLY WHAT IT SAYS ON THE TIN®